



HAWK TRIPOD EASEL INSTRUCTIONS


Release both front legs and set at desired height and retighten ensuring the easel is level.

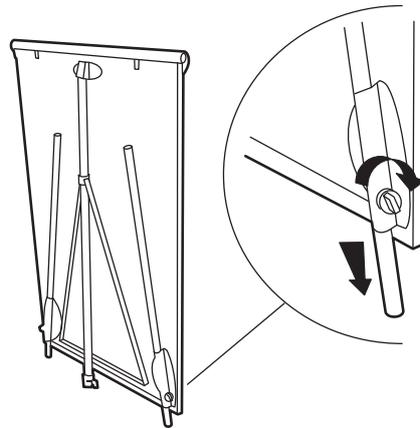

Rotate the back leg until the triangular brace reaches the locking mechanism, then release the bottom section of the back leg, angle the easel to its desired position and retighten.

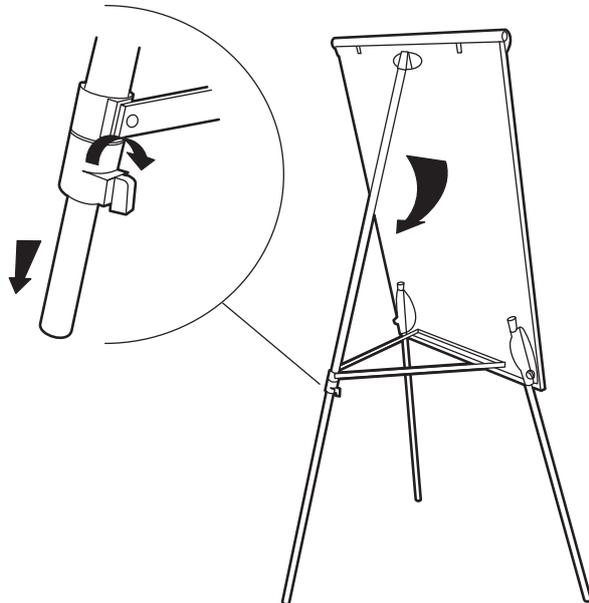

To load the flipchart pad, simply lift the top clamp, slide the hooks into the correct position for your pad, hang the pad and close the clamp.

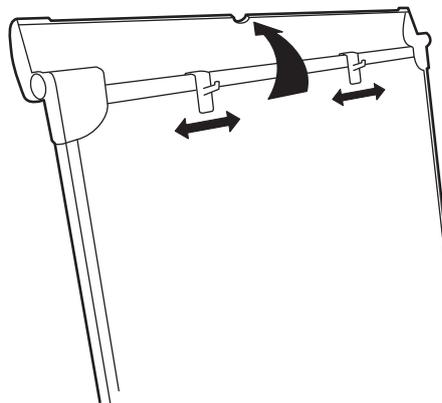

Your easel is now ready to use.